

Resetting your Feature 983 Log Code (used when trying to access Feature 983 and all your log in codes are invalid)

1. Press **Feature 985**
2. Press **9**
3. Enter: **73738767793** (Spells → RESET SM PSWD)
4. Press **Okay**
5. This will default the password to:
 - If 2 digit extensions: 120000
 - If 3 digit extensions: 1020000
 - If 4 digit extensions: 10020000

Resetting your Feature 982 Log Code (used when trying to access Feature 982 and the default password 1111 does not work)

1. Press **Feature 982**
2. Enter **67372867** (Spells → OPERATOR)
3. Display will say PSWD, enter 1111
4. Press **Okay**
5. This will change the default password to: 1111

