


Connect the network and power, as shown below:

You have two options for network and power connections. Your system administrator will advise you which one to use.

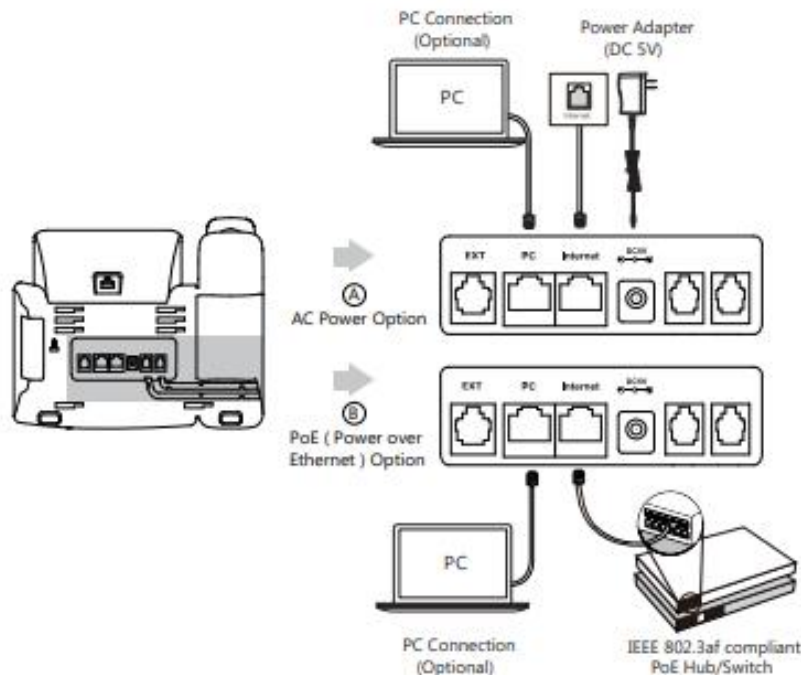

Note: The IP phone should be used with Yealink original power adapter (5V/1.2A) only. The use of the third-party power adapter may cause the damage to the phone. If you are connecting a PC to your phone, we recommend that you use the Ethernet cable provided by Yealink. If inline power (PoE) is provided, you don't need to connect the power adapter. Make sure the hub/switch is PoE-compliant.

Or click on the link below to watch video

https://www.google.com/search?q=connecting+yealink+t54+phone+to+hardware+connection&sc_esv=a385e8322a02f559&rlz=1C1CHBD_enCA1009CA1010&sxsrf=ADLYWIK2iw7XYta6QBdDdhVXPKlGA%3A1736363053246&ei=L CX- Z9LkDqfx0PEPmaeryAo&oq=connecting+yealink+T54+phone+to+hard&gs_lp=Egxnd3Mtd2l6LXNlcniAiJGNvbm5lY3RpbmcgeWVhbGluayBUNTQgcGhvbUgdG8gaGFyZCoCCAMyBRAhGKABMgUQIRigATIFECEYoAEyBRAhGKABSL5jUMcOWKJHcAN4AZABAJgBsAGgAZoJggEDMS45uAEBYAEA-AEBmAlNoALCCcICChAAGLADGNYEGEfCAGgQABiABBiiBMICCBAAAGKIEGikFwgIEECEFZgDAIgGAZAGCJIHBDMuMTCgB_Uk&scclient=gws-wiz-serp